 


5 IN 1

Hot Air Styler

Instructions for use

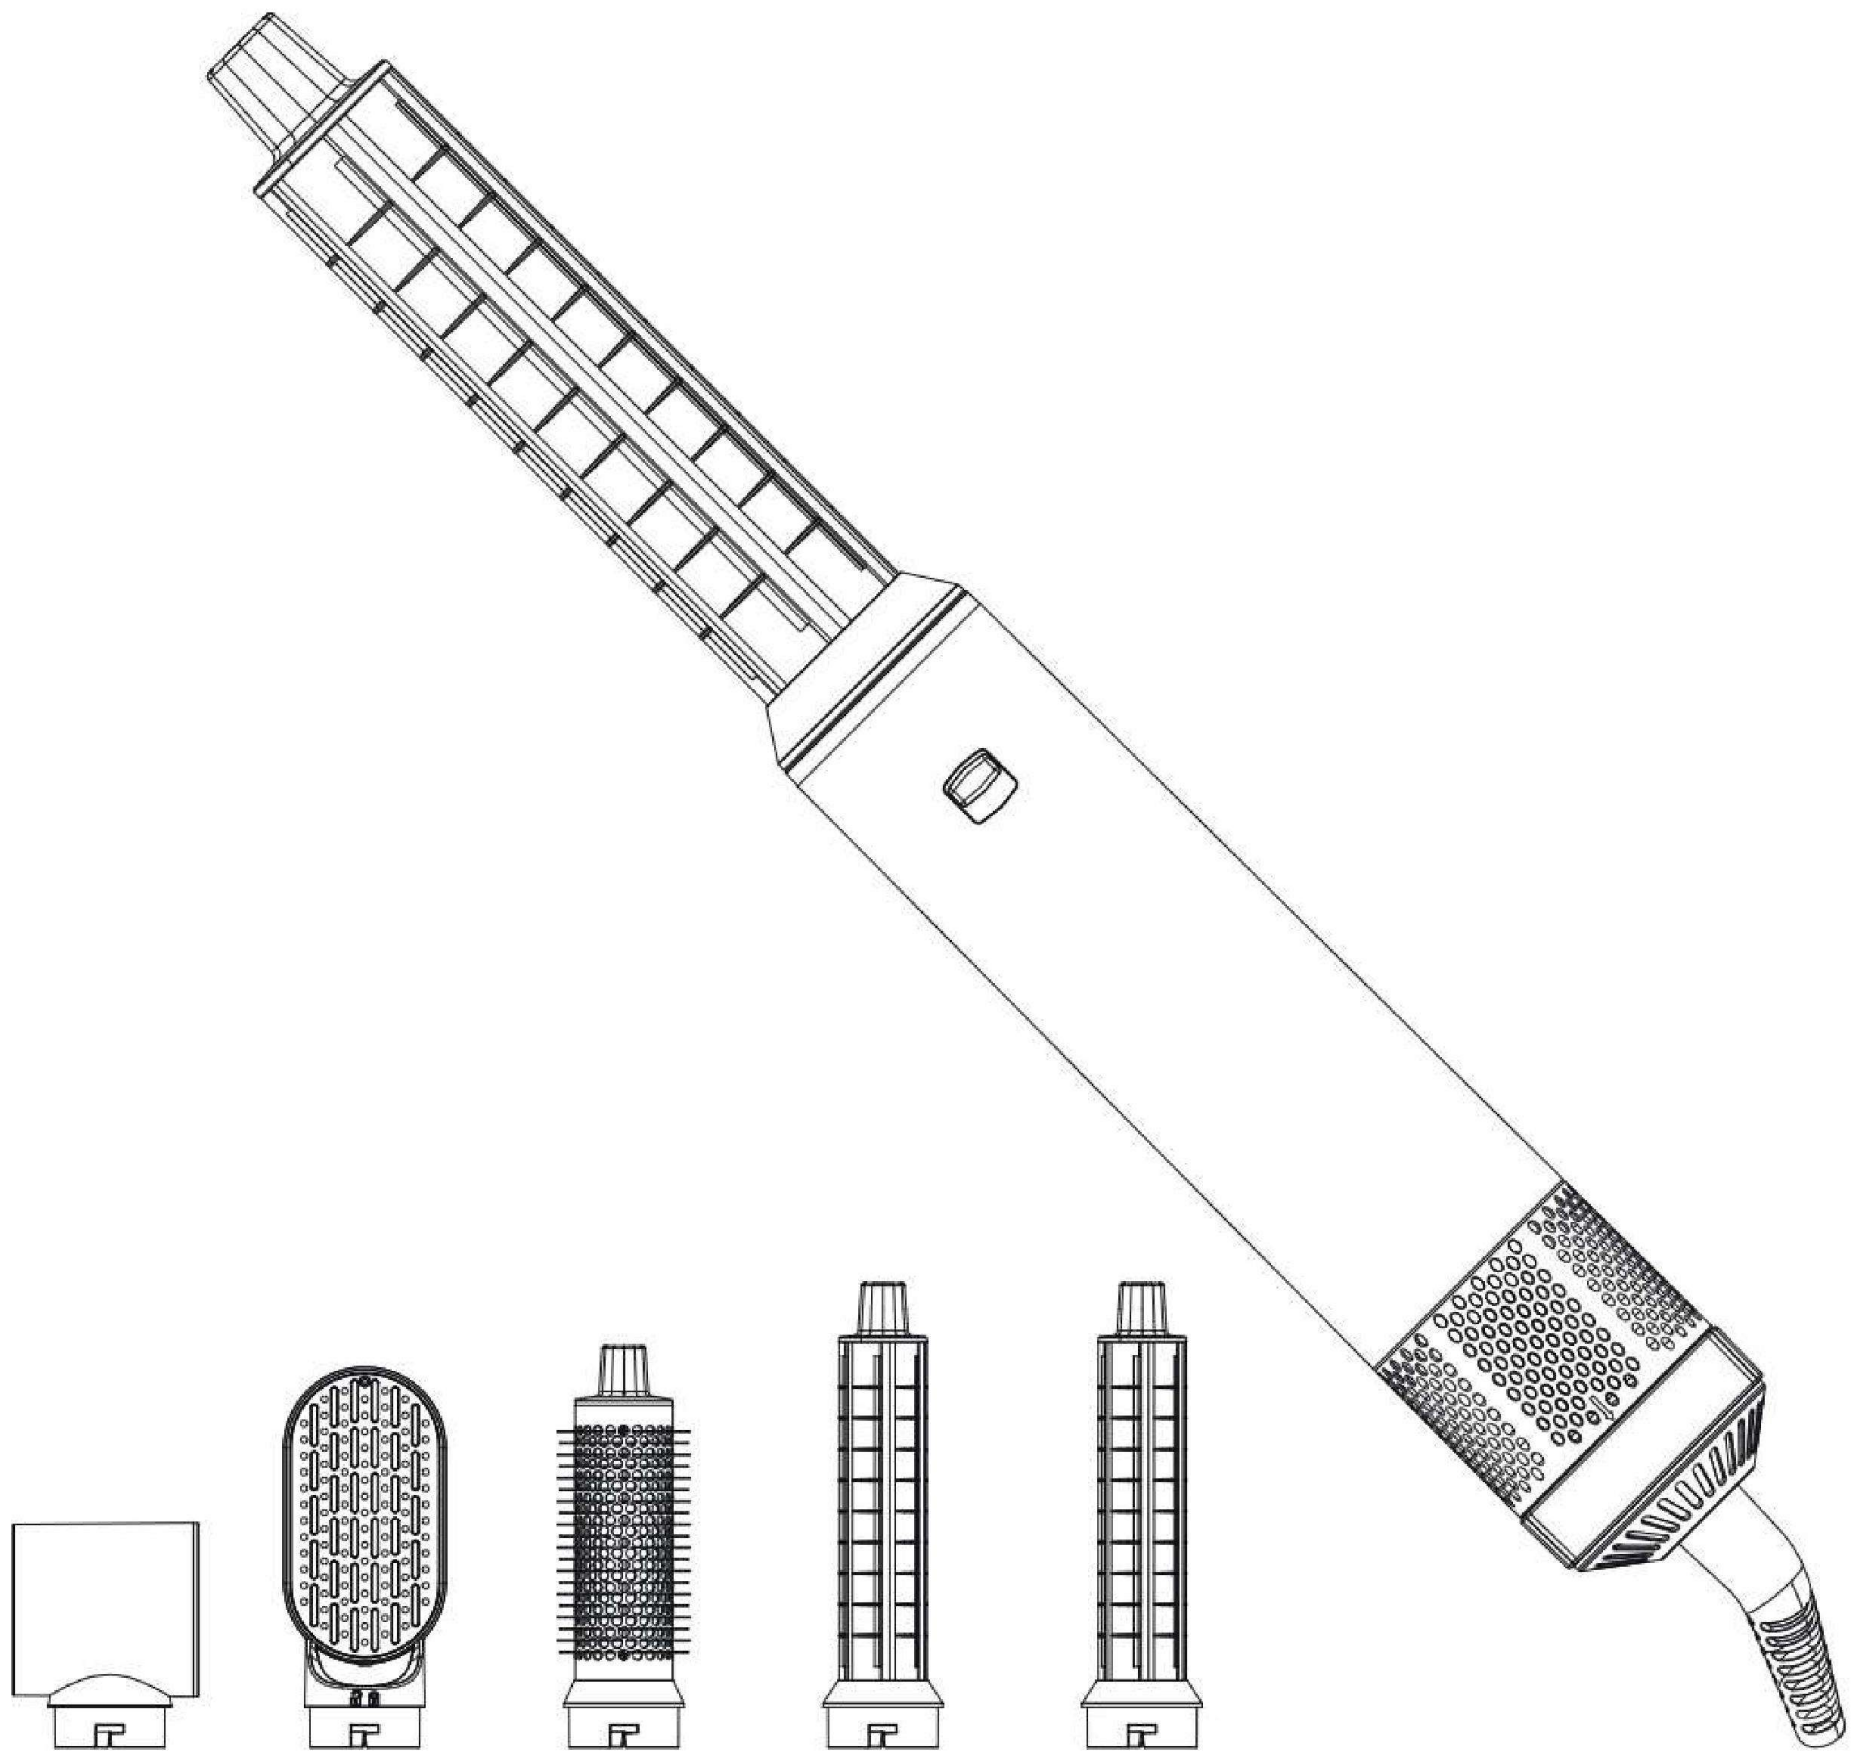

Please read the following instructions carefully to allow you to enjoy your quality product.

SAFETY PRECAUTIONS

1. Before first plugging the unit into your outlet, check that voltage indicated on the rating label corresponds to the voltage of your home.

2. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.

4. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

5.  WARNING-DO not use this appliance near bathtubs, showers, basins or other vessels containing water.

6. Do not use the hair dryer for any other purposes than those described in this instruction manual.

7. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

8. Do not use outdoors.

9. Always unplug the hair dryer from the power supply when not in use and before cleaning.

10. To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.

11. Do not spray aerosol products when the hair dryer is operation.

12. Do not leave the hair dryer switched on when you do not use it.

 
13. Do not use other attachments than which supplied.

14. The air inlet and outlet openings should never be obstructed to prevent from getting too hot.

15. Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.


16. Store the appliance in a cool, dry place. Do not use it when there is water in your hands.

PRODUCT DESCRIPTION

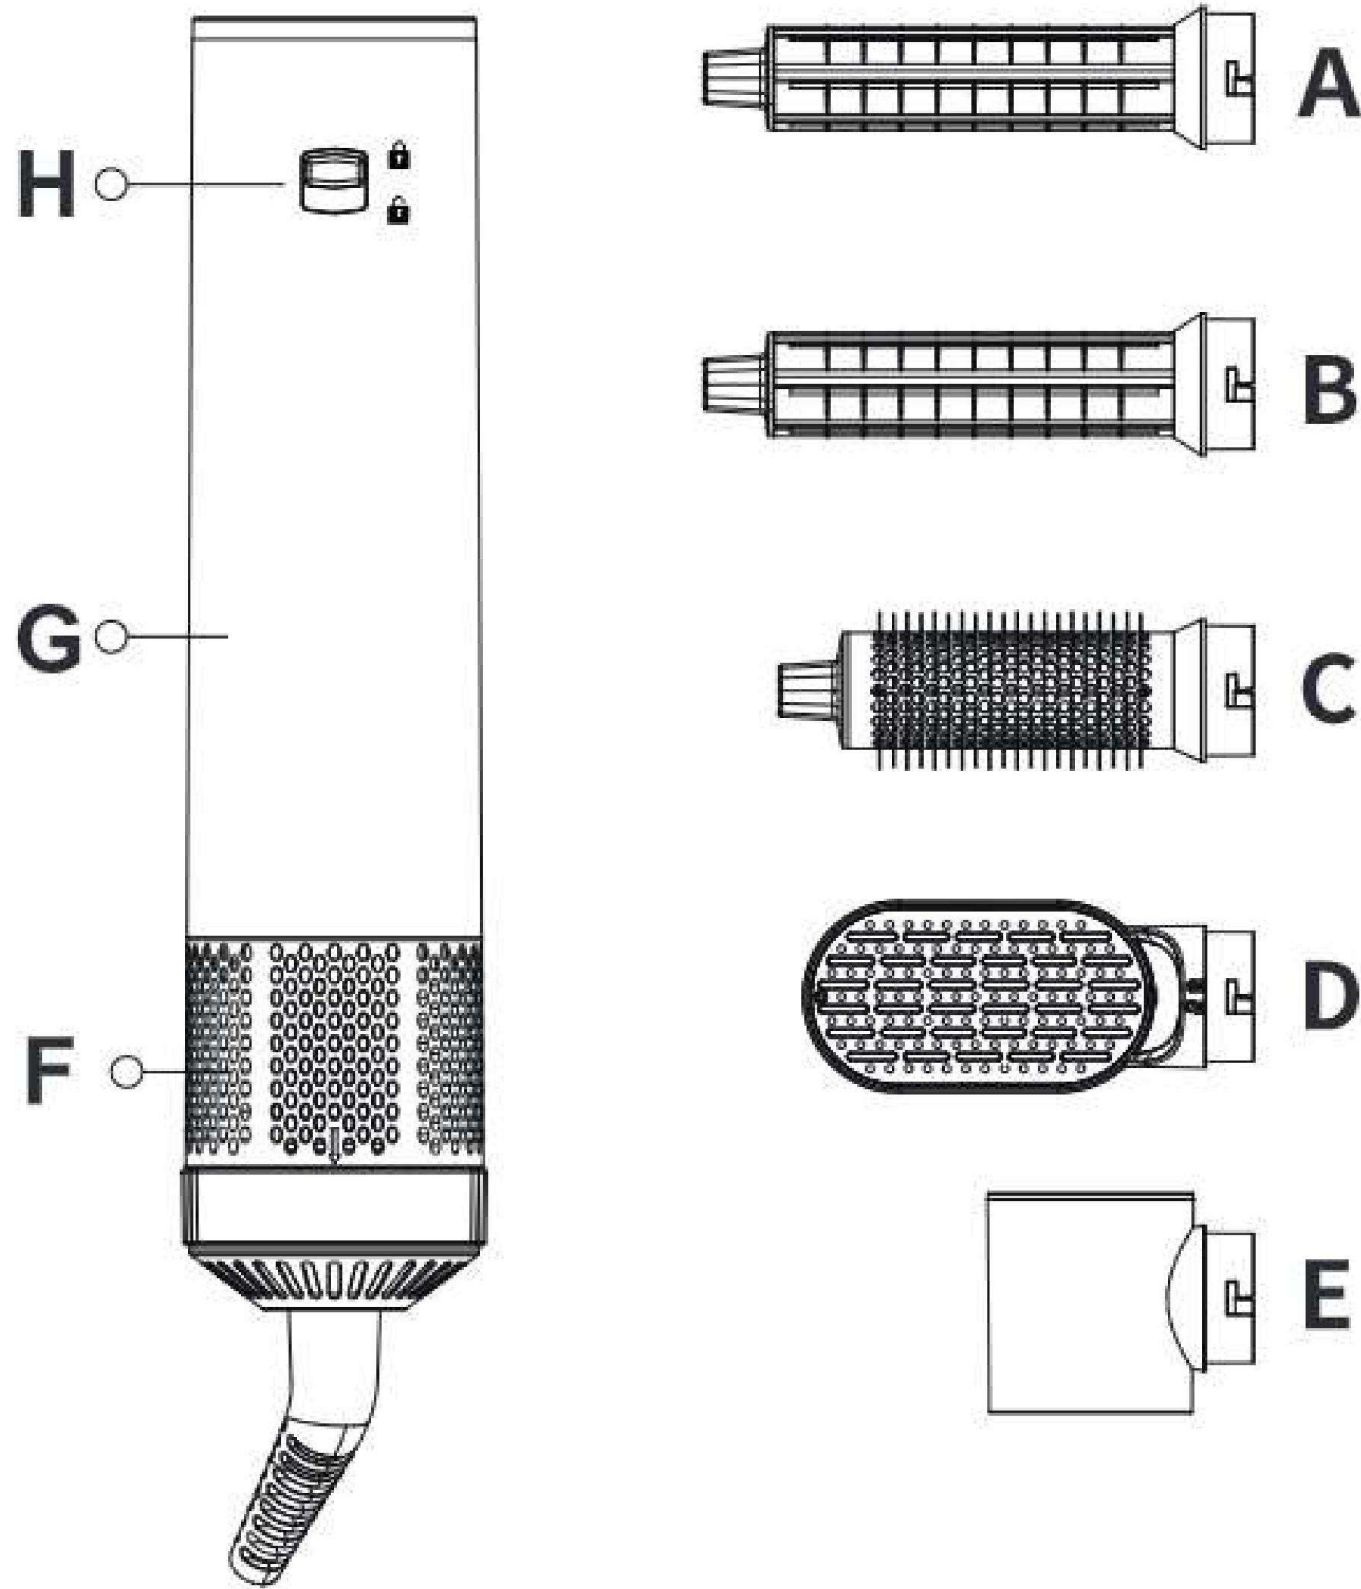

- A..Left curling barrel (32mm/1.26inch)
- B.Right curling barrel (32mm/1.26inch)
- C.Round comb
- D.Hot air brush
- E.Straightening comb
- F.Drying head
- G.Removable vent sheet
- H.Main machine
- I.Attachment lock

 OPERATION

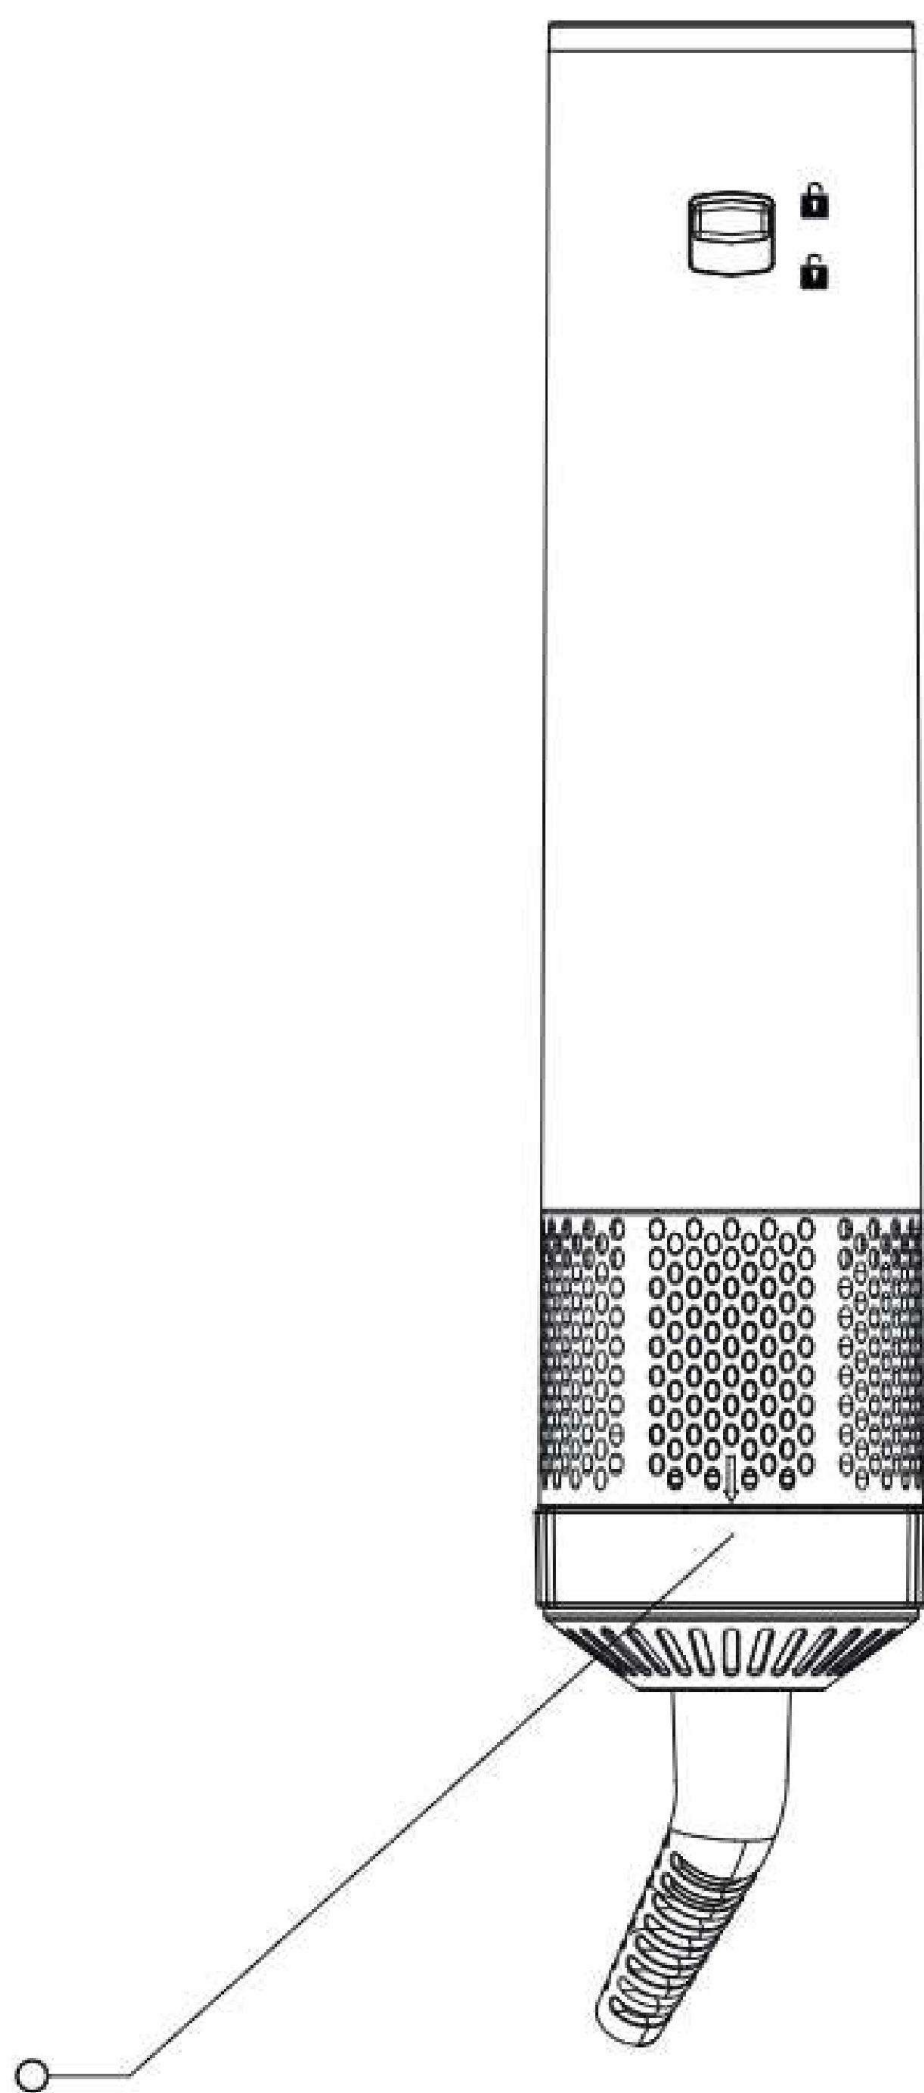

Knob Switch

Off: Turn off

LOW: Low temperature (50°C/122°F)

MIDDLE: Middle temperature (80°C/176°F)

HIGH: High temperature (105°C/221°F)

CHANGING THE STYLING ATTACHMENT

Fit the attachment onto the body of the unit by lining up the guides on the two parts and then press the two together while revolve the comb gently to clockwise direction until you hear a click. To remove the comb, press on the unlocking button located on the sides of the unit and gently pull the attachment off. The styling attachment is a spiral comb for hair curling purpose.

HOW TO USE THE ATTACHMENTS

Check the voltage on the handle of the appliance if corresponds to your local power supply.

1. Turn the lock from  to  replace/remove the attachments.
2. Use the drying head after washing hair.
3. Use the Concentrated nozzle to dry and get your hair straighten.
4. Use the curling barrels for curly hair styles.
5. Use the Straightening comb smoothing hair.
6. To create beautiful side waves, place hair into the round comb firmly from tip to bottom.
7. To create spiral curls, place hair on the curling barrels and move gently.

When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off:

For additional protection, the installation of a residual current device (RcD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



Meaning: This appliance is not suitable for use in a bath or shower.

WARNING: Do not use this device in a bathtub, shower or water filled reservoir

Never wrap the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.