

Safety Information Statement

Instruction Manual

1. Regularly cleaning toys helps maintain their good appearance and hygiene. Before cleaning, make sure to turn off the toy and unplug it to ensure safety.
2. Check the various parts of the toy regularly for damage or looseness. If any problems are found, repair or replace the parts in time to ensure the safe use of the toy.

Meanwhile, the toy features an anti-swallowing design to prevent accidents during use. Please use it under adult supervision to ensure proper usage and avoid misuse. After use, please store it properly, avoiding direct sunlight or damp environments, to prolong the toy's lifespan.

 
Battery instructions:

- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity(+and-);
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Batteries are only to be charged by persons of at least 8 years old.
- The batteries should be charged under adult supervision.
- This toy contains batteries that are non-replaceable.
- Non-rechargeable batteries are not to be recharged.
- The toy is not to be connected to more than the recommended number of power supplies.
- Warning : For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.
- The instruction sheet shall be retained since it contains important information.

Battery Replacement Guide for Rechargeable Electric Toy with Removable Battery:

1. Switch the toy off before replacing batteries.
2. Open the battery compartment cover. If the cover is secured with a screw, use a suitable tool to open it.
3. Remove the used batteries, if applicable.
4. Insert new batteries according to the polarity markings (+/-) inside the battery compartment.
5. Replace the battery compartment cover and ensure it is securely fastened.

This toy is only to be connected to equipment bearing either of the following symbols:



Operating frequency band : 2407-2476MHZ

Maximum RF power : -5.13dBm

Small drift high speed car instructions

Packing list



 
Remote control



Battery



USB charging cable

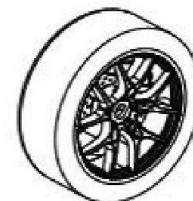


High-speed tire X4




Instruction manual

 Remote control car and remote control battery installation and charging

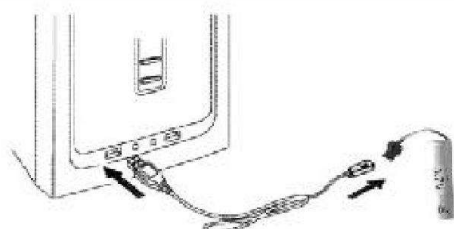


 Connect the battery to the charging cable, then plug in the USB charging cable. On the USB port of the computer or USB charger, then switch on Power. A red light indicates charging. When the red light doesn't go on it means full.

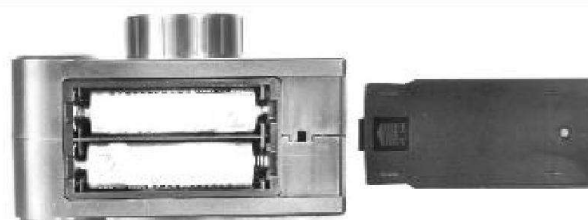


Remote control battery installation method

 - (1) Open the battery cover of the remote control.
- (2) Load 1.5V "AA" according to the correct polarity 2 batteries, cover the battery cover and lock the screw.

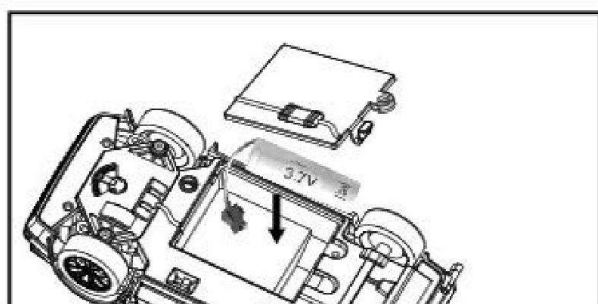

 After charging is complete, turn the battery. Put in battery compartment locking screws.

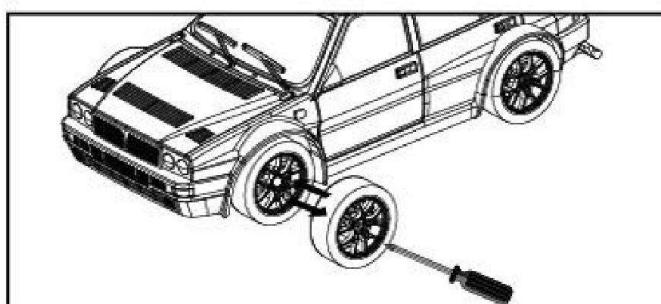


4 high-speed tires are included in the package and can be self-propelled. Replace the drift tire.

Operation method

1. Turn the power switch of the remote control car to the "ON" position. Put the remote control car on a flat surface, turn on the remote control switch. When the remote control light stops blinking, you can flip the joystick. Perform operations.
(Note: The remote control light can not be flipped when flashing)

 Power switch

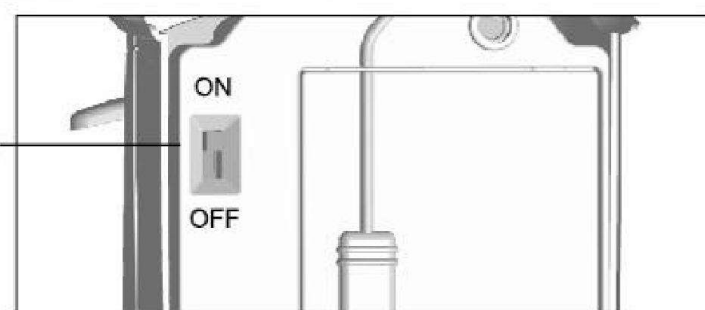


Product use basic operation diagram

Left / right steering wheel



 Forward / backward control lever

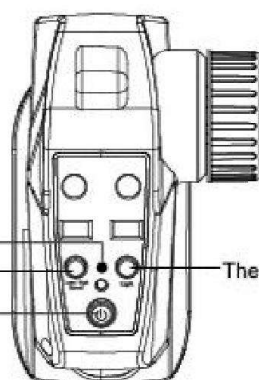

Power indicator
High and low speed switching
The power switch

The light switch

1. Pull the remote control lever backwards to remotely control the car. Move forward, move forward to move the remote control car backwards. When the control lever is pulled back halfway, the remote control car will slowly move forward; When the joystick is fully pulled backwards, the remote control car will quickly move forward.
2. Rotate the "right turn/right turn steering wheel" clockwise. Turn the car right, counterclockwise, "turn left/turn left" Turn left with the steering wheel.
3. High and low speed buttons: Factory default low speed gear. Press the switch button to switch to high gear.
4. Light switch: Press once to turn on the body lights, then press again to turn off the body lights.

