

MINI CAMERA


Operating Manual



Before using this product, please read the user manual carefully.
The manual is for reference only.
The actual operation should be based on the product itself.i

1. Product Appearance

English

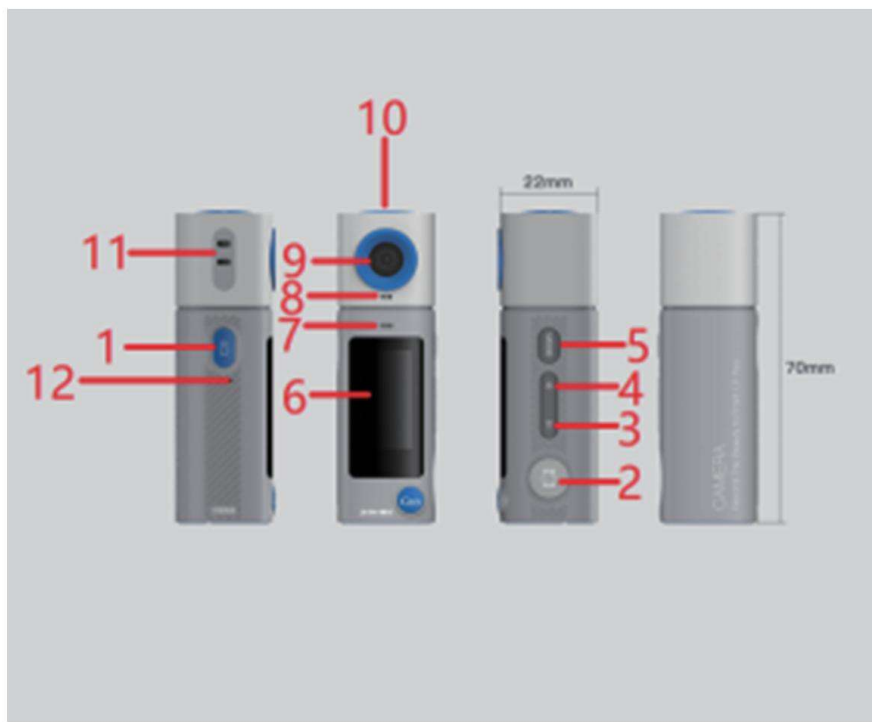

- | | | |
|--------------------------|--------------------|-------------------|
| 1. Power button | 2. Camera button | 3. Down arrow key |
| 4. Up button | 5. Mode button | 6. Display screen |
| 7. Power indicator light | 8. Microphone hole | 9. Lens |
| 10. Speaker output hole | 11. Lanyard hole | 12. Reset hole |

2. Introduction to Button and Interface Functions

Power Button: 1) Press and hold for 3 seconds to power on/off; 2) Tap to turn off the screen;

Camera Button: 1) Tap to confirm; 2) Tap to take a photo/record video;

Up Button: 1) Tap to switch filters; 2) Tap the up selection button; 3) Press and hold to rotate the screen 180 degrees;

Down Button: 1) Press and hold for 3 seconds to mirror the screen; 2) Tap to switch filters; 3) Tap the down selection button.

Mode Button: 1) Tap to switch between photo/video/playback modes; 2) Press and hold to enter/exit the settings menu.

Reset Button: 1) When the device experiences screen flickering, abnormal freezing, or other issues, briefly poke it with a pinhole-like object to force a shutdown.

Note: Do not remove or insert the card while in video recording/photo taking/audio recording/playback mode! TYPE-C Interface: 1) Interface type: Type-C; 2) Used to connect to an external power source to charge the battery or provide operating power; 3) Used to connect to a PC for 'charging/memory/camera' operations.

3. Operating Instructions

English

USB Mode: After powering on, connect the device to your computer via USB. The device screen will display three options: 'Charging/Storage/Camera'.

Charging: Only for powering the device from the computer.

Storage: In this mode, you can save and view video and photo files.

Camera: In this mode, you can use your computer's webcam.

Playback Mode: In playback mode, long-press the shutter button to bring up the delete/lock menu, and press the power button to exit.

4. Working status

The indicator light stays solid red while the camera is charging and turns off when fully charged.

The power indicator light is blue and flashes when the camera is in use.

V. OTG User Manual

1. Use a Type-C to Type-C cable that supports data transfer to connect the camera to your smart device;
2. Opening the camera will switch to connection mode. Use the up and down arrow keys to select and confirm "Storage Mode".

- Android System: ① A pop-up notification will appear after successful connection, or pull down the notification bar, tap the USB connection notification to access the USB drive, and view/export files. ② Alternatively, open the device's "File Manager", find the external "USB Device" icon, tap to access the USB drive, and view/export files.

- Apple System: Open the device's "Files" app, go to the "Browse" page, find the external "Removable Disk" icon, tap to access the USB drive, and view/export files.